

---

## CARE INSTRUCTIONS

---

Take care of you fingerboard and it will last for years to come.

- Do not stack anything on top of your fingerboard. It is best to store it standing on its side. Store it indoors and keep it away from humidity/moisture/liquids. If any fluid comes in contact with your board, wipe it off immediately.
- ALWAYS DUST OFF YOUR FINGERBOARD BEFORE PLAYING. Even a few grains of sand/dust between the coins and the board will cause scratches on the surface. Store the discs in the storage bag provided to keep them dust-free.
- An occasional rubdown of the surface with a soft dry cloth will get rid of light scratches.
- Do not use furniture cleaner or other cleaning sprays on your fingerboard.
- If you desire a smoother surface, apply a **thin even** coat of Carnauba Wax. If there are areas where the wax is applied thicker, shiny streaks might show. We use the brand "The Real Milk Paint Co." If you order from their website ([www.realmilkpaint.com](http://www.realmilkpaint.com)) you can get a 10% discount by using the coupon code WAXONWAXOFF. Use a piece of an old t-shirt, fold it in a small square (you want a flat surface with no wrinkles) to apply the wax. You can use the wax on the wooden frame too. By the time you finish waxing the surface and the wooden frame you should be able to rub it off with a clean piece of an old t-shirt. You may also use *Minwax® Paste Finishing Wax (Natural)*, but the Carnauba Wax is easier to apply. Avoid getting wax on the rubber strips.



**Shooter discs not gliding smoothly?** Rub the bottom of the shooter discs for about 10 seconds on a 320 or finer grit sandpaper (place sandpaper on a flat hard surface) and then rub it on a clean cloth. Repeat if needed.